


VERTICAL
REINFORCEMENT
AS REQ'D

HORIZONTAL
REINFORCEMENT
AS REQ'D

METAL LATH, MESH, OR WIRE SCREEN
PLACED IN BED JOINTS UNDER KNOCK-OUT
BOND BEAM COURSES TO PREVENT FILLING
OF UNGROUTED CELLS

VIEW OF STANDARD
BLOCK BEFORE
CROSS WEBS ARE
KNOCKED OUT

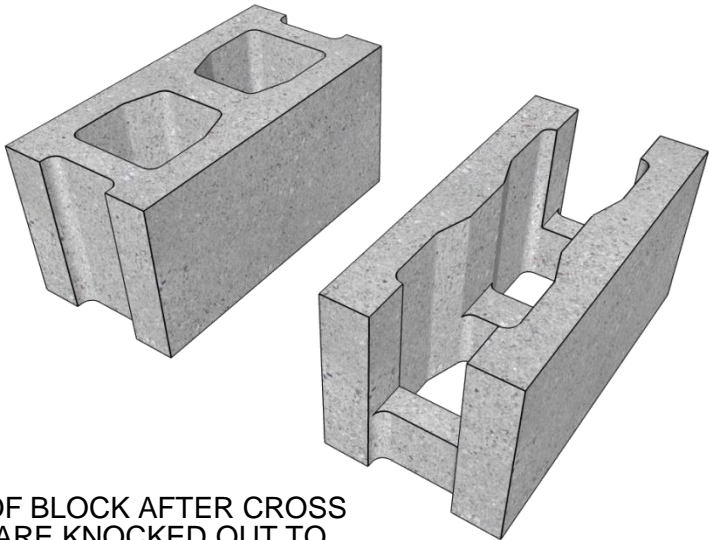

VIEW OF BLOCK AFTER CROSS
WEBS ARE KNOCKED OUT TO
ACCOMMODATE HORIZONTAL
REINFORCEMENT

KNOCK-OUT CMU BOND BEAMS

DIAGRAM 02.410.0141

REV. 11/30/10

International Masonry Institute



800-IMI-0988 www.imiweb.org

© 2011 INTERNATIONAL MASONRY INSTITUTE